

---

# Troubleshooting CODA Configurations

---

1. **If PEB is not connected:** check that you remembered to switch the file type from Et to File

2. **If when initializing ROC, the notifications go on forever:** You may have multiple ROCs running. To check this:

```
ps aux | grep coda
```

```
kill [PID from ps]
```

First command will list all processes with coda in the name  
PID is the number in the first column

3. **If all terminals on the EEL computer are closed when accessing remotely:**

(a) Open a terminal on your computer and log into compton@camsonne2-lpt

(b) Type the following commands

```
vncserver -kill :[number]
```

```
vncserver -geometry 1920x1200 :[number]
```

(c) Open the vncviewer. In the terminal, type the following command to start the window manager

```
xfwm4
```

4. **When restarting the EEL 126 computer:**